


UltraPure® PF Series® Point-of-Use UHP Gas Purifiers

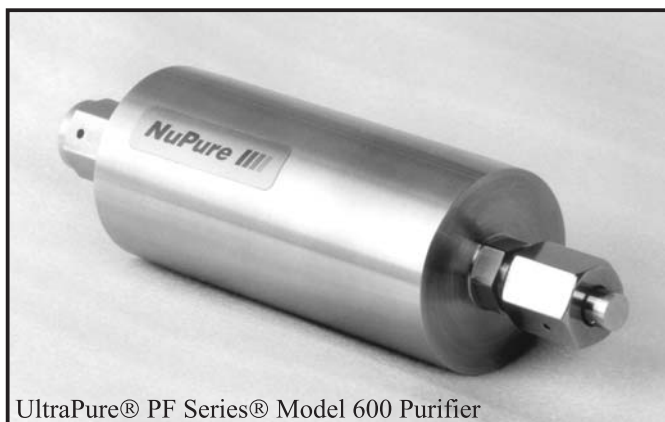

UltraPure® PF Series® Model 600 Purifier

FEATURES

- ◆ Purifier / Particle Filter combination
- ◆ Improves Equipment performance and process economy
- ◆ Sub-ppb removal of impurities from Inert Gases, Nitrogen, Hydrogen, Acid Gases, Oxygen and Hydride Speciality Gases
- ◆ Integral 0.003 μm Sintered Stainless Steel Filter Media (9 log reduction)
- ◆ 316L stainless steel (<10 Ra) or 316L VAR (<5 Ra) electropolished wetted surface finish
- ◆ Optional Hastelloy C-22 filter media / housing or Nickel filter media
- ◆ In-Situ regeneration and bakeable to 450° C

APPLICATIONS

- ◆ Semiconductor Industry
- ◆ High Purity Welding
- ◆ Gas Analyzer Carts
- ◆ Analytical Industry
- ◆ Research and Development
- ◆ Gas Bottle Filling Plants

The PF Series® Purifier-Filter reduces a wide range of gaseous impurities (see chart below) to sub-ppb levels from Inert Gases, Hydrogen and Hydrides, Acid Gases and Oxygen, and includes filtration to 0.003 μm in one single unit.

The PF Series® gas purifiers come in a standard range of 0 - 100 slpm. High flow purifier units (XL-Series) are available for components sets and bulk purifier systems.

High pressure purifiers (max 3000 psig) available upon request, are ideal for gas bottle filling plants and other similar high pressure applications.

LISTING OF GASES PURIFIED / FILTERED


Inert Gases		Hydrogen / Hydrides		Acid Gases	Oxygen
Impurities Removed H_2O , O_2 , CO , CO_2 , H_2^1 (N_2 , CH_4) ²		Impurities Removed H_2O , O_2 , CO_2 , CO , (N_2) ³		Impurities Removed H_2O	Impurities Removed H_2O , CO_2 , (H_2 , CO , CH_4) ⁴
Ar	Ar/ CH_4	H_2	As H_3	HBr	O_2
He	CH_4	Ar/ H_2	PH $_3$	HCl	Air
Ne	CF $_4$	N_2 / H_2	NH $_3$	BCl $_3$	N $_2$ O
Kr	CCl $_4$	SiH $_4$	B $_2$ H $_6$	BF $_3$	
Xe	SF $_6$	Si $_2$ H $_6$	H $_2$ Se	Cl $_2$	
N $_2$	Freons	D.C.S.	GeH $_4$	HF	

1 - Only with purchase of -H model. 2 - Additional impurities removed from He, Ne, Ar, Kr, Xe and N $_2$ only, using heated getter.

3 - Additional impurities removed from Hydrogen only, using heated getter. 4 - Only with purchase of optional heated catalyst.

UltraPure® PF Series®

Dimensional and Performance Specifications

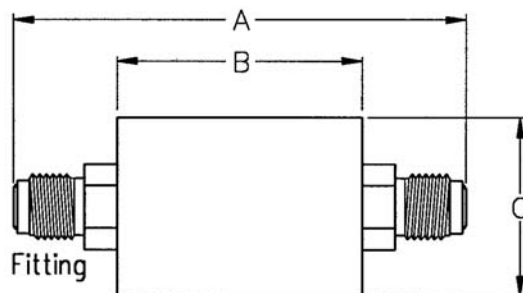

Model	A in (mm)	B in (mm)	C in (mm)	Average Flow (slpm) ¹ for 1 year lifetime (removal of impurities per chart page 1)	Max Flow (slpm) @150 psig PF Series	Max Flow (slpm) @ 150 psig XL Series Room Temp
Mini PF	3.3" (84)	1.5" (38)	1.0" (25)	0.3	1.5	4.5
100 PF	3.3" (84)	1.5" (38)	1.5" (38)	1	5	15
200 PF	4.8" (122)	3.0" (76)	1.5" (38)	2	10	30
600 PF	6.3" (160)	4.5" (114)	2.0" (51)	6	30	90
1000 PF	8.8" (224)	7.0" (178)	2.0" (51)	10	50	150
2000 PF	12.5" (317)	10.7" (272)	2.5" (63)	20	100	300
Maximum Pressure 250 psig (USA) / 9.9 kg/cm ² G (Japan) Materials 316L SS (<10 Ra) or 316L VAR (< 5 Ra) Operating Temperature Room Temperature or 375-450°C Fittings 1/4" VCR ² / Compression / Tubing Leak Rate < 2 x 10 ⁻¹⁰ atm cc/sec He Gas Inlet VLSI grade (99.9995% minimum) ¹						

1 - Lifetime is inversely proportional to the total inlet impurity level and to average flow. Lifetime for H₂O/O₂ removal only using getter purifiers is approx **4 years** at the stated flows / inlet gas. Room temperature getter purifiers will require periodic regeneration to achieve this total lifetime.

2 - VCR compatible fitting standard. VCR® is a registered trademark of Cajon Corporation.

UltraPure®XL Series

The XL Series of Gas Purifiers are available in the above dimensions for applications requiring < 1 ppb with high flow performance. For Semiconductor Applications, a sub-micron filter should be installed downstream of the purifier. See NuPure Metal and Ceramic Filter data sheet for a full selection of Gas Particle Filters.

UltraPure®Standard Series

The Standard Series of Gas Purifiers are available in the above dimensions. They are recommended for Industrial, Research and Analytical applications requiring <10 ppb with high flow performance.

For regeneration and for applications requiring removal of all impurities, an external band heater, digital temperature controller with solid state relay and thermal insulation blanket is recommended.

NuPure IIII

67 Iber Road, Unit 107,
Ottawa ON K2S 1E7 Canada
Tel: (613) 836-0336 Fax: (613) 836-0297
E-mail: sales@nupure.com Web-site: www.nupure.com

Or Contact: